

**M570 series oscilloscope
User's Guide
Version 1.02**



Copyright © 2004-2006 ETC s.r.o.

Thank you for choosing oscilloscope from M570 series, a product of ETC s.r.o. We believe it will fulfill your expectations. In order to assure that we will be able to provide you with up-to-date information, please fill-out the registration form at the ETC website.

For any further information or consultations, please contact us via mail, phone or preferably e-mail on the following adress:

Address:

ETC s.r.o.
Rosinská cesta 8
010 08, Žilina
Slovak Republic

Phone:

+421-41-5652687

Fax:

+421-41-5652687

Internet:

URL: <http://www.etcsk.com>
e-mail: support@etcsk.com - technical support
sales@etcsk.com - sales
info@etcsk.com - other information

Contents

Package contents	7
Warranty conditions	7
Software License Agreement	7
Precautions	8
1. Installation	9
1.1. Requirements	9
1.2. Hardware installation	9
1.3. Software installation	9
2. Hardware	10
2.1. Hardware description	10
2.1.1. Digital Shielding (DSH)	11
2.1.2. Trigger circuits	11
2.1.3. Data acquisition	13
3. Basic information	15
3.1. Front panel layout	15
3.2. Basic terms	15
4. Main window	16
4.1. Oscilloscope screen	16
4.2. Quickview	18
4.3. Cursors and grid controls	18
4.4. Channel display controls	19
4.5. Save/load controls	19
4.6. Zoom controls	20
4.7. Timebase controls	21
4.8. Trigger mode controls	22
4.9. Trigger controls	23
4.10. Vertical range controls	24
4.11. Vertical shifts controls	25
4.12. Signal source controls	25
4.13. Channel information	26
4.14. Main menu	26
4.14.1. Options	27
4.14.2. Manage exports window	28
4.15. Special functions controls	29
5. Other functions	31
5.1. Print Support	31
5.1.1. Setting the name of a new layout	33
5.1.2. Layout Manager	33
6. Special functions	35
6.1. 80% function (80%)	35
6.2. Channel difference function (A-B)	35
6.3. Channel add function (A+B)	35
6.4. Channel A inversion (-A)	35
6.5. Channel B inversion (-B)	35
6.6. Channel A voltage inversion (-VA)	35
6.7. Channel B voltage inversion (-VB)	35
6.8. X-Y function (X/Y)	36

6.9. Fourier transformation function (FT).....	37
6.9.1. Main menu	39
6.9.2. Complex filter window	41
6.10. Inverse fourier transformation function (IFT)	42
6.11. Waveform parameters function (Wp)	42
6.11.1. – Main menu	44
7. Performance characteristics	45
7.1. Vertical deflection system.....	45
7.2. Triggering	45
7.3. Data acquisition system	45
7.4. Probe compensation generator	46
7.5. Power	46
7.6. Mechanical characteristics	46
7.7. M574 timebase ranges	46
8. Saved data format	48
8.1. .esb format.....	48
8.1.1. Block structure	48
8.1.2. Available information	49

Figures and tables

Fig. 2.1.2.1. – Block schematics of trigger circuits	11
Fig. 2.1.2.2. – Examples of trigger events (all inputs are enabled)	12
Fig. 2.1.3.1. – Simplified block schematics of the data acquisition	13
Fig. 3.1.1. – Front panel	15
Fig. 4.1. – Main window	16
Fig. 4.1.1. – Oscilloscope screen	17
Fig. 4.2.1. – Quickview	18
Fig. 4.3.1. – The cursors and grid controls	18
Fig. 4.4.1. – Channel display controls	19
Fig. 4.5.1. – Save/load controls	19
Fig. 4.5.2. – Load controls	19
Fig. 4.5.3. – Save controls	20
Fig. 4.6.1. – Zoom controls	20
Fig. 4.7.1. – Timebase controls	21
Fig. 4.8.1. – Trigger mode controls	22
Fig. 4.9.1. – Trigger controls	23
Fig. 4.9.2. – Trigger source controls	23
Fig. 4.9.3. – After trigger amount controls	23
Fig. 4.9.4. – Hold-off controls	24
Fig. 4.10.1. – Range controls	24
Fig. 4.11.1. – Vertical shift controls	25
Fig. 4.12.1. – Signal source controls	25
Fig. 4.13.1. – Channel information	26
Fig. 4.14.1.1. – Options window	27
Fig. 4.14.2.1. – Manage exports window	28
Fig. 4.15.1. – Special functions controls	29
Fig. 5.1.1. - Print Manager Window	31
Fig. 5.1.2. - Object Info	32
Fig. 5.1.3. - List of available objects	32
Fig. 5.1.1.1. - Specify Layout Name Window	33
Fig. 5.1.2.1. - Layout Manager Window	34
Fig. 6.8.1. – X-Y function window	36
Figure 6.9.1. – Fourier transformation window	37
Figure 6.9.2. – Status panel	38
Figure 6.9.3. – Information about harmonic selected by cursor	38
Figure 6.9.4. – Screen controls	39
Figure 6.9.2.1. – Complex filter window	41
Figure 6.9.2.2. – Selected frequency controls	42
Figure 6.9.2.3. – Frequencies controls	42
Figure 6.9.2.4. – New frequency window	42
Figure 6.11.1. – Waveform parameters window	43
Table 7.1.1. – Vertical deflection system	45
Table 7.2.1. – Triggering	45
Table 7.3.1. – Data acquisition system	46
Table 7.4.1. – Compensation generator	46
Table 7.5.1. - Power	46
Table 7.6.1. – Mechanical characteristics	46

Table 7.7.1. – M574 timebase ranges47

Package contents

- M570 series oscilloscope – 1pc
- USB cable – 1pc
- installation leaflet – 1pc
- CD with software and user's guide in pdf – 1pc

Warranty conditions

The ETC s.r.o. company guarantees reliable operation of the M570 oscilloscope in compliance with this documentation during a period of 24 months from the date of purchase.

Should a malfunction occur during the warranty period, excluding errors for which ETC can not be held responsible, ETC guarantees the repair of the product or its replacement with a new or repaired one free of charge.

The ETC company shall not be responsible for malfunctions on the device caused by an accident, incorrect manipulation, unauthorized interventions or similar.

When requesting the warranty service, the customer should send the device in its original package to the dealer from whom it was purchased or directly to the ETC company. The warranty certificate together with a description of the defect or malfunction should be included in the package. The customer agrees that a new or repaired product to be shipped would be insured against damage or loss during the transport and that he will cover the costs for the shipment and insurance.

Software License Agreement

This legal document is an agreement between you, the end user, and ETC s.r.o. By installing this product on your computer, you are agreeing to become bound by the terms of this agreement and warranty conditions.

1. GRANT OF LICENSE. ETC s.r.o. as Licensor, grants you, the Licensee, a nonexclusive right to use and display this copy of the M570 software (hereinafter the "SOFTWARE"), this EM570 device and accompanying written materials, on a single COMPUTER at a single location and only together so long as you comply with the terms of this License.

2. OWNERSHIP. As the LICENSEE, you own the magnetic or other physical media on which the SOFTWARE is originally or subsequently recorded or fixed, but an express condition of this License is that ETC s.r.o. retains title and ownership of the SOFTWARE recorded on the original disk copy(ies) and all subsequent copies of the software, regardless of the form or media in or on which the original and other copies may exist. This License is not a sale of the original SOFTWARE or any copy.

3. COPY RESTRICTIONS. This SOFTWARE, EM570 device and accompanying written materials are copyrighted. Unauthorized copying or copy attempt of the EM570 device, including module which has been modified or included with any other system, or of written materials is expressly forbidden. It is, however, allowed to pass SOFTWARE on as the DEMO version. You may be held legally responsible for any copyright infringement which is caused or encouraged by your failure to abide by the terms of this License.

4. **DISCLAIMER OF THE WARRANTY OF ANY KIND CONCERNING SOFTWARE.** This SOFTWARE and accompanying written materials are provided "AS IS" without a warranty of any kind. Further, ETC s.r.o. does not warrant, guarantee or make any representations regarding the use, or the results of use, of the SOFTWARE, EM570 device or written materials in terms of correctness, accuracy, reliability, currentness, or otherwise. The entire risk as to the results and performance of the software is assumed by you.

Precautions

Please follow these recommendations to avoid any possible problems that might occur while using the oscilloscope:

- read the User's Guide
- always connect device using cable, which is the part of package. If it is not possible, always use USB 2.0 cable.
- never connect signal with absolute voltage higher than 200V to measuring inputs. This value is valid for frequencies lower than 100kHz. Over this frequency, the voltage lowers with raising frequency. For example frequency 200kHz of 100V, 400kHz of 50V is the limit.
- never connect voltage lower than -10V and higher than +13V to the external triggering input (frequency lower than 20kHz). Over 20kHz, voltage lower than -0.5V or higher than +4V is not recommended.
- never connect voltage to the oscilloscope ground, it may result in device or computer damage
- never disassemble device, since there are no user serviceable parts inside

1. Installation

1.1. Requirements

Minimum configuration:

- PC PENTIUM compatible computer
- 64MB RAM
- CD-ROM
- VGA with resolution 800 x 600
- USB port 1.1
- mouse or other tracking device
- at least 20MB free space on the hard drive
- MS Windows 98 SE, ME, 2000 or XP

Recommended configuration:

- PC PENTIUM compatible computer with speed of at least 800MHz
- 256MB RAM
- CD-ROM
- VGA with resolution at least 1024x768
- USB port 2.0
- mouse or other tracking device
- at least 20MB free space on the hard drive
- MS Windows 98 SE, 2000 or XP

1.2. Hardware installation

Connect one side of the cable to the computer, other one to the device. Proceed with the software installation.

WARNING: Always use cable, which is the part of the package. Usage of the improper cable can disable communication with the computer.

1.3 Software installation

The software and the device drivers are located on the enclosed CD. Insert the CD into the CD-ROM drive. Then follow the instructions of the setup program that should launch automatically. If the CD autorun is not enabled in your computer's settings, please run file *autorun.exe* from the CD.

2. Hardware

The information contained in this chapter will help you to understand the features of your oscilloscope.

2.1. Hardware description

The M570 series of dual channel digital storage USB oscilloscopes connect to the computer via USB. They are compatible with both USB 2.0 and USB 1.1. Measurement accuracy is achieved by the stability of the parts used together with the computing power of the computer. Calibration data are part of the HW, which makes it impossible to lose them (opposite to the calibration data located on the diskette). Therefore, it is possible to simply connect the hardware to any computer (via USB 1.1 or USB 2.0 interface). All you have to do is just installing the software.

The M570 series oscilloscopes allow user to measure waveforms using two independent channels with resolution of 8 bits and sensitivity from 10mV/div to 5V/div (80mVfs to 40Vfs) in 9 steps. One division of the oscilloscope screen contains 32 dots. Input impedance matches the oscilloscope standards therefore any regular oscilloscope probe (with minimum compensation range of 32pF) can be connected to the device. The software supports 1:1, 1:10, 1:100 and 1:1000 probes. AC or DC coupling and type of probe can be independently selected for each vertical channel. Any of the inputs can be grounded without disconnecting the probes from the measured system. Vertical track position can be controlled with accuracy of 1 pixel of the oscilloscope screen. Measurement can be triggered from the Channel A, Channel B and/or External trigger input. Trigger threshold can be set independently for each channel in the range of whole oscilloscope screen with resolution of one pixel. Threshold of the External trigger input is fixed to about 1.5V (TTL and CMOS compatible). The M570 series oscilloscopes have the dual level triggering system, which is closely described in chapter 2.1.2. Oscilloscope hardware offers data acquisition with maximum rate of 50, 100 or 200MS/s depending on the model. Therefore it is not possible to sample non-repetitive waveforms faster than every 20, 10 or 5ns (depending on the model). However, thanks to random sampling method, it is possible to sample repetitive waveforms with period of 200, 100 or 50ps (depending on the model), which corresponds with equivalent sampling rate of 5, 10 or 20GS/s. For displaying waveforms acquired using the random sampling method, the ETC company has developed system called WCD (Waveform Conformity Detection), which speeds up display of changes of measured waveform.

The oscilloscope hardware can acquire data in one universal mode.

- **Acquiring data before and after trigger with settable trigger position** displays waveform before and/or after trigger. The position of the trigger is settable by the user. In this mode the hardware of the oscilloscope starts data acquisition immediately after the start of measurement. The trigger event terminates the data acquisition after collection the data amount set by the user. The trigger position can be set to any place between these margins. The "Hold Off" timer allows the user to prevent the occurrence of a trigger event after the start of data acquisition. This feature allows to acquire proper amount of data before the trigger.

Each measuring channel of the M570 series oscilloscopes has its own AD converter. No channel multiplexing is used for dual channel operation.

2.1.1. Digital Shielding (DSH)

Digital Shielding removes interference asynchronous with the measured signal, and it does not affect frequency characteristics of the measured waveform. The only negative effect of DSH is longer time period of waveform stabilization. It is, however, very simple to turn the DSH off using the on-screen controls. The DSH efficiency level corresponds to DSH level factor that can be set to any value from 2 to 64. The higher the level you choose, the longer it takes to stabilize.

2.1.2. Trigger circuits

The block schematics of the dual level trigger circuits are shown on the figure 2.1.2.1.

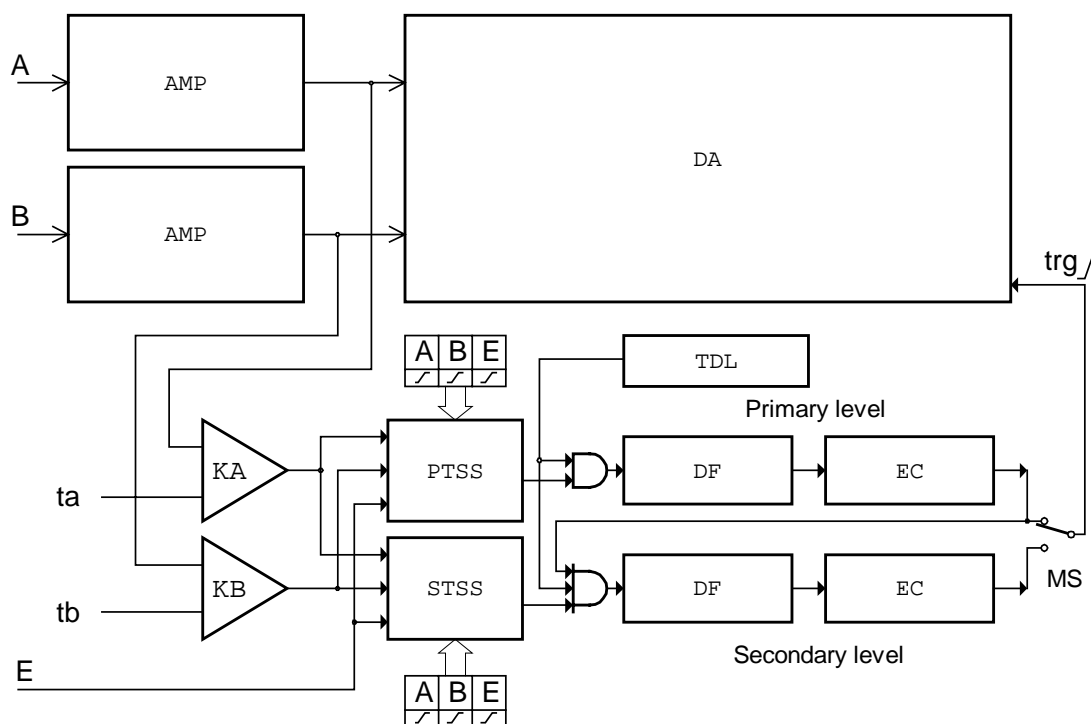


Fig. 2.1.2.1. – Block schematics of trigger circuits

Data for trigger circuits come either from Channel A, Channel B or from external trigger input (E). The comparators KA and KB produce binary signals for Primary Trigger Source Selector (PTSS) and Secondary Trigger Source Selector (STSS) while the threshold of each comparator (ta, tb) can be set to any value in the vertical range. If the actual output voltage of the channel is higher than the actual threshold the output of comparator is set to 1 (TRUE). If it is lower than the threshold, the output will be 0 (FALSE). The Trigger Source Selectors for each triggering level are independent. It is possible to select the source of triggering signal for each level independently. In addition to source selection, the PTSS and STSS can invert any of the input signal. The trigger event is generated with respect to change of the selector (PTSS, STSS) output signal from 0 (FALSE) to 1 (TRUE). Constant level of the

signal cannot start the measurement. In case that only one of the signals is selected, trigger event is generated corresponding to the polarity, which is symbolically presented by direction of change of the signal. (0 to 1 means no inversion). When there are several inputs selected, the selector makes a logical addition (OR) of all of the selected inputs. Before adding the signals together, ones are adjusted with respect to the polarity settings. Trigger event is generated only when the change of result of the logical addition occurred from 0 to 1 (FALSE to TRUE). Logical values of the signals in the input of logical adder (OR) from which the trigger event is generated are created on the basis of following rules: value 0 (FALSE) is the value that selector input signal should have before valid trigger event. 1 (TRUE) is the value that this signal will have after the valid trigger event. For example, if triggering from Channel A is set to the trailing edge, then the output voltage of the channel is higher than the threshold voltage, consequent value on the adder input will be 0 (FALSE). Inverse situation will be taken as 1 (TRUE). Note that when using logical addition, all values must be 0 (FALSE) in order for result to be 0 (FALSE). It is relatively easy to find out which are the valid trigger events. Figure 2.1.2.2 shows several valid and invalid trigger events (all inputs are enabled).

 
 


 


 
 





 
 
 
			selected trigger event
A	B	E	
			valid
			invalid
			invalid
			valid
			valid

Fig. 2.1.2.2. – Examples of trigger events (all inputs are enabled)

The digital pulse filters (DF) are implemented in both primary and secondary trigger levels. If activated, they filter out pulses shorter than the value $4 \cdot N \cdot T_s$, where T_s is the actual real time sampling period and N is the value set by the user ($1 \leq N \leq 32767$). If we want to use this option it is necessary to set the valid trigger event to the end of the pulse. For example, if the pulse we want to filter off is positive (0 to 1 to 0) the trigger event should be set to trailing edge (1 to 0). If the pulse is inverse (1 to 0 to 1), the trigger event should be set to leading edge (1 to 0). The outputs of digital pulse filters are connected to event counters (EC). It counts the unfiltered pulses. If the MS switch is set to primary level, the output of primary event counter will change from 0 (FALSE) to 1 (TRUE) to indicate the valid trigger event after reaching the terminal count, which is user settable in the range of 1 to 32767. If the MS switch is set to secondary level, the output of primary event counter activates the secondary trigger level. The input selector, digital filter and event counter can be set for secondary level independently to define the valid trigger event.

The trigger circuits of the series M570 DSOs are equipped with Hold Off timer (TDL). It blocks the triggering event for time period $T = 4 \cdot H \cdot T_s$ from the start of data acquisition, where T_s is the actual real time sampling period and H is the user

selectable value from 0 to 32767. It is important to set the proper value H to ensure that the hardware of the oscilloscope acquires proper amount of data before trigger event. For example, if we want to display waveform for time period of T_z before the trigger it is necessary to set $T \geq T_z$ to ensure that all of the data will be displayed.

The M570 series oscilloscopes have four triggering modes implemented:

AUTO – Data acquisition is triggered by a valid trigger event. However, when after certain time the trigger event does not occur, measurement starts.

NORMAL – Data acquisition is triggered by a valid trigger event.

SINGLE – Data acquisition starts after activation from the control panel and it is synchronized by the valid trigger event. Just one measuring cycle is executed.

MANUAL – One measuring cycle is executed immediately after activation from the control panel.

2.1.3. Data acquisition

The simplified block schematics of data acquisition is shown on Figure 2.1.3.1.

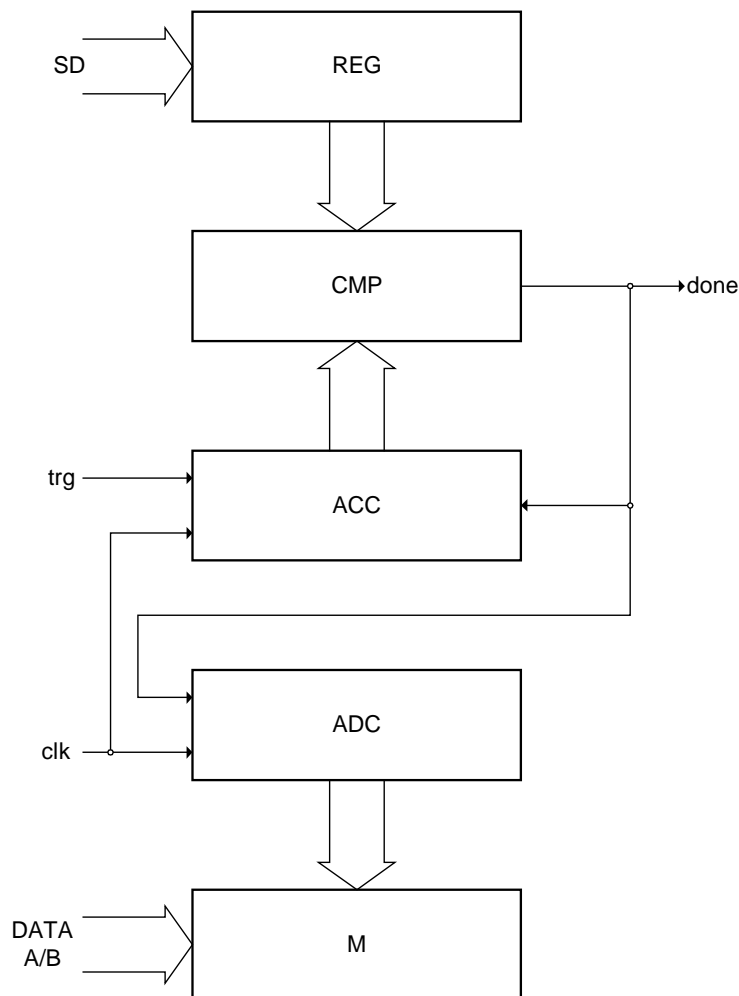


Fig. 2.1.3.1. – Simplified block schematics of the data acquisition

The data from AD converters are stored in the onboard memory M. This memory is addressed by address counter ADC, which starts to count immediately after start of measurement, regardless of trigger event. The occurrence of valid trigger event starts the after trigger data counter (ACC). Comparator CMP compares the state of ACC with the output of register (REG), which contains data amount acquired after trigger. When the output of ACC reaches the value written to REG, the comparator produces the signal (done), which stops both the ADC and ACC counters. The amount of data written after trigger to memory depends on the value of REG. The value written to REG controls the relation of the trigger event and the displayed data. Changing the value of REG it is possible to display data before, before and after or only after trigger.

3. Basic information

3.1. Front panel layout

Channel A, channel B, external synchronization input / compensation generator output and LED are accessible on the front panel.



Fig. 3.1.1. – Front panel

If the LED color is:

- green, the device is configured and there is no communication with a computer in this moment
- orange, the device communicates with a computer
- red, device is powered, but not configured

3.2. Basic terms

This Chapter explains the basic terms used throughout the text.

Click – Position the mouse cursor over the chosen object. Then press and release the left mouse button.

Double-Click – Two successive clicks.

Drag – Position the mouse cursor over the object you want to move. Then press the left mouse button and hold it down. The chosen object moves with the mouse cursor. After releasing the mouse button the object moves to the new location.

Enter the value into the edit box – Click the edit box. Use the keyboard to enter the desired value and confirm pressing “Enter”.

Insert the value into the edit box – Click the edit box. Use the keyboard to enter the desired value.

Set the value using the scroll bar – It is possible to change a value by simply dragging the scroll bar slider. Clicking the arrows of the scroll bar increases or decreases the value by minimal steps. Clicking in between the slider and the arrows changes the value by larger steps.

Select the value from the combo box – Open the list of all possible values of the edit box by clicking it. Then set the desired value by clicking it.

4. Main window

The main window opens after the application starts. The controls in this window allows you to use most of the oscilloscope functions.

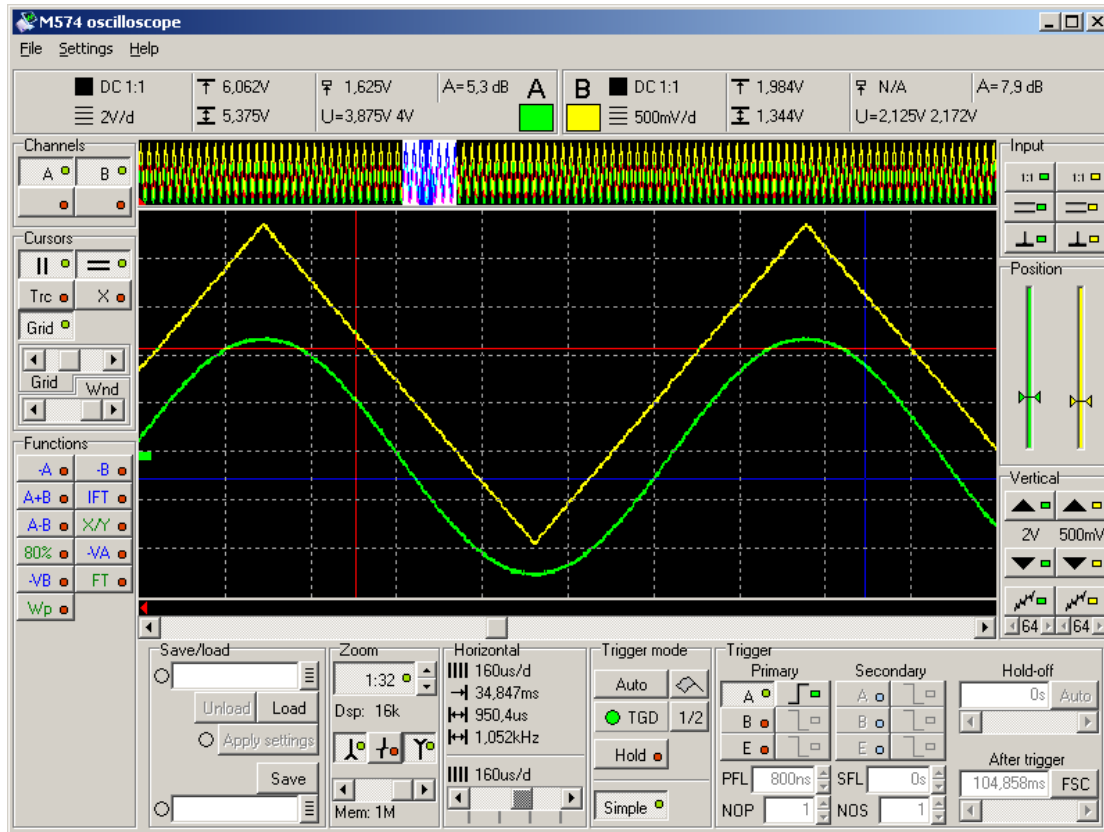


Fig. 4.1. – Main window

All controls connected to one of the channels have channel color.

TIP: The channel color can be changed in main menu.

4.1. Oscilloscope screen

The oscilloscope screen is located in the middle of the main window.

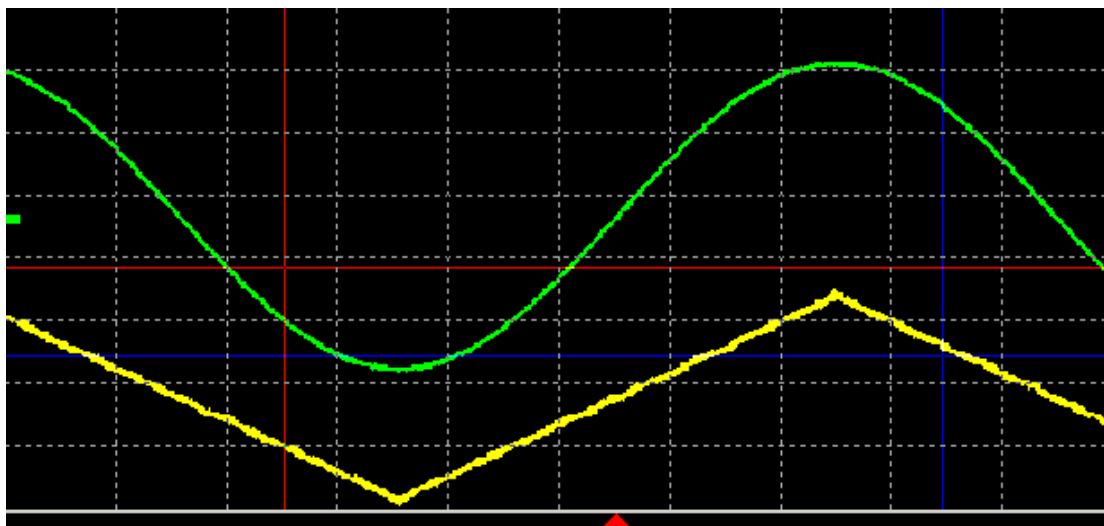


Fig. 4.1.1. – Oscilloscope screen

The oscilloscope screen is divided into 10 horizontal and 8 vertical divisions. The trigger event is marked with the red triangle located in the bottom of the screen. If the trigger event occurred before the displayed waveform, the arrow pointing left is drawn. If the trigger event occurred after the displayed waveform, the arrow pointing right is drawn.

WARNING: The trigger mark position can slightly differ (especially when using fast timebase) from the real position of the trigger event.

Two vertical and two horizontal cursors can be activated. Vertical cursors have red (cursor 1) and blue (cursor 2) color by default. Horizontal cursors have red (cursor 1) and blue (cursor 2) color by default as well.

TIP: The cursors color can be changed in main menu.

You can move cursor by dragging it.

The waveform is drawn using the channel color. The default channel colors are following: Channel A green, channel B yellow, virtual channel (the one used for display of function result) C is light blue and channel D is orange.

TIP: The channel colors can be changed in main menu.

The threshold voltage mark is located in the left. You can change threshold voltage by dragging it.

TIP: If the used memory size is larger than 64k, the quickview is displayed above the oscilloscope screen. Use the quickview to select the 64k long part of the memory, that can be displayed in the oscilloscope screen.

4.2. Quickview

If the used memory size is larger than 64k, the quickview is displayed above the oscilloscope screen.

 


Fig. 4.2.1. – Quickview

The white rectangle indicates the part, which can be displayed in the oscilloscope screen. Drag this rectangle to change its position.

The blue rectangle indicates the part, which is displayed in the oscilloscope screen. Drag this rectangle to change its position.

The triangle in the bottom of the quickview indicates the trigger position.

TIP: You can turn the quickview on/off in main menu. If the quickview is turned off, you can display more than 64k samples in the oscilloscope screen.

4.3. Cursors and grid controls

The cursors and grid controls are located in the left part of the main window.

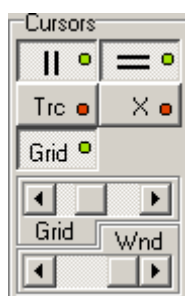


Fig. 4.3.1. – The cursors and grid controls



- activates/deactivates vertical cursors.



- activates/deactivates horizontal cursors.

„Grid“ - activates/deactivates grid.

„Trc“ - activates/deactivates the Trace mode, where the cursors behave as follows:

- the cursor 2 behaviour is not affected
- while dragging cursor 1, the cursor 2 moves to maintain the distance between cursors

„X“ – activates/deactivates mode, where the drag of cursors intersection moves both cursors

The top scrollbar (Grid) adjusts grid brightness. The bottom scrollbar (Wnd) adjusts window transparency.

TIP: The grid color can be changed in main menu.

WARNING: The window transparency consumes system resources when turned on. Drag scrollbar to the right to turn the window transparency off.

WARNING: The window transparency is supported by the Windows 2000 and Windows XP. In case, the software runs under different operating system, the scrollbar is disabled.

4.4. Channel display controls

The channel controls are located in the left of the main window.



Fig. 4.4.1. – Channel display controls

„A“ – activates/deactivates channel A waveform

„B“ – activates/deactivates channel B waveform

The special function can be activated by click on the appropriate button (located in special functions box) followed by click on one of the buttons located in the bottom of the channel controls. Function results are displayed with the color of the selected virtual channel (left button is channel C, right one is channel D).

4.5. Save/load controls

The save/load controls are located in the bottom of the main window.

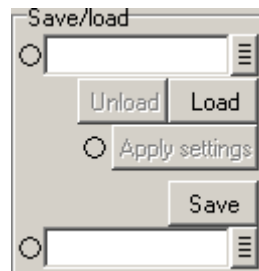


Fig. 4.5.1. – Save/load controls

The load controls are located in the panel top.

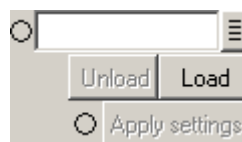



Fig. 4.5.2. – Load controls

The name of source file has to be inserted into the upper edit box. Click  to browse for the file.

Click “Load” button to load and display data. The indicator by the edit box turns green on successful load.

TIP: If the filename ends with the number, this number can be automatically incremented on the successful load (this feature can be turned on/off through main menu).

Click “Unload” button to stop displaying the loaded data.

Click “Apply settings” to set the settings loaded from the data file.

TIP: The settings can be applied automatically (this feature can be turned on/off through main menu).

Indicator by the „Apply settings“ button changes color depending on the actual settings this way:

Green – the actual settings and settings from the data file are same


Yellow – the actual settings differs from the settings from the data file in some parameters, but the range and timebase settings are same

Red – the actual settings differs from the settings from the data file in range or timebase settings

The save controls are located in the panel bottom.



Fig. 4.5.3. – Save controls

The name of target file has to be inserted into the upper edit box. Click  to browse for the file.

Click “Save” button to save data. The indicator by the edit box turns green on successful save.

TIP: If the filename ends with the number, this number can be automatically incremented on the successful save (this feature can be turned on/off through main menu).

4.6. Zoom controls



The zoom controls are located in the bottom of the main window.




Fig. 4.6.1. – Zoom controls


Click top button to activate/deactivate zoom.


TIP: While scrolling the scrollbar (the one under the main screen) with zoom deactivated, two violet lines are drawn on the screen. These lines determine the part of waveform displayed with activated zoom.

 ,  – change zoom factor

If there are more than 500 samples displayed on the screen, one displayed sample has to be calculated out of more than one measured sample. The samples are then displayed as follows in this case:

If the  button is activated, the displayed sample is calculated as average of the measured samples.

If the  button is activated, the displayed sample is calculated as a maximum of measured samples.

If the  button is activated, the displayed sample is calculated as a minimum of measured samples.

If both the  button and  button are activated, the line connecting measured sample with maximum and minimum value is displayed.

Use the scrollbar in the bottom of the panel to change the used memory size.

4.7. Timebase controls

The timebase controls are located in the bottom of the main window.

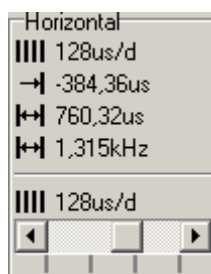


 
 



Fig. 4.7.1. – Timebase controls

You can change timebase using scrollbar located in the bottom.


Following information are available above the divider:

-  - time of one screen division (used to acquire currently displayed data)
-  - time between trigger event and vertical cursor 1
-  - time between vertical cursors
-  - frequency between vertical cursors

Following information are available below the divider:

-  - time of one screen division (current settings)

WARNING: If the information about the time between trigger event and vertical cursor 1 has to be accurate (error smaller than 10ns), it is necessary to make following correction: measure time between trigger event mark and real trigger event and use this value to correct the information.

If the sampling mode is activated, the  is displayed with two rectangles reflecting the amount of samples acquired (left rectangle represents channel A, right one represents channel B):

red – less than 50% samples are acquired

yellow – more than 50% but less than 100% samples are acquired

green – 100% samples are acquired

4.8. Trigger mode controls

The trigger mode controls are located in the bottom of the main window.





Fig. 4.8.1. – Trigger mode controls

Click button on the top left corner to switch between following trigger modes:

„Normal“ – It produces sweep only when the trigger signal meets the threshold level and slope criteria.

„Auto“ – Measurement if repeatedly triggered. If the trigger event does not occur before timeout, the sweep free-runs without the trigger signal; otherwise it is triggered by trigger.

„Single“ – Single measurement. Starts by clicking on the  button. Sweep is produced only when trigger signal meets the threshold level and slope criteria.

„Manual“ – Single measurement. Starts by clicking on the  button. Sweep is produced regardless the trigger signal.

The „TGD“ indicator reflects the measurement state by changing its color:

red – the measurement has started, but the trigger event has not occurred yet

yellow – the measurement has started, trigger conditions met, but the data acquisition hasn't finished yet

green – the measurement has ended, the data are displayed on the oscilloscope screen

“1/2” – sets the trigger threshold to the middle between maximum and minimum value of the waveform.

“Hold” – pauses the measurement

“Simple” – switches trigger controls to/from simple mode. The secondary triggering level is deactivated, the trigger counter on primary level is set to one and a

digital filter on the primary level is activated and set to minimum value in simple mode.

4.9. Trigger controls

The trigger controls are located in the bottom of the main window.

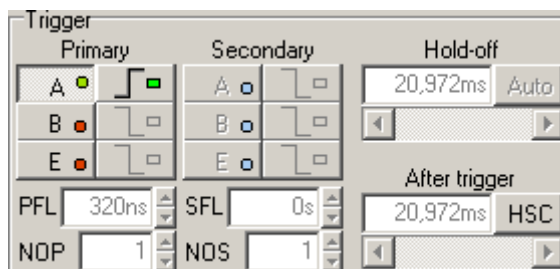


Fig. 4.9.1. – Trigger controls

The trigger source controls are located in the left.




Fig. 4.9.2. – Trigger source controls

Left buttons control primary level, the right ones control secondary level.

“A” – activates/deactivates channel A as triggering source

“B” – activates/deactivates channel B as triggering source

“E” – activates/deactivates triggering from external triggering input (E)

 - switches between sensitivity on leading/trailing edge

You can enter required trigger event occurrences count into NOP (primary level) or NOS (secondary level) edit box. The count can be any value from 1 to 65535.

You can enter minimum length of trigger event considered as valid into PFL (primary level) or SFL (secondary level) edit box.

TIP: You can use units in the PFL/SFL edit box (for example 45u is 45 microseconds). Valid units are: n – nano, u – micro, m – milli).

The after trigger amount controls are located in the bottom right corner.

 


Fig. 4.9.3. – After trigger amount controls

The button in the right switches between following after trigger modes:

“HSC” – Half of the memory is acquired after, other half before trigger.

“FSC” – Whole memory is acquired after trigger. This, in fact, is the classic after trigger mode.

“MIN“ – The amount of data acquired after trigger is set to minimal possible value (pure before trigger mode).

“SET“ – The time acquired after trigger event can be set by entering value into the edit box or using scrollbar.

TIP: You can use units in the edit box (for example 45u is 45 microseconds). Valid units are: n – nano, u – micro, m – milli).

The hold-off controls are located in the top right corner.

 


Fig. 4.9.4. – Hold-off controls

The button in the right switches between following hold-off modes:

“AUTO” – The hold-off time is set to guarantee acquisition of the whole memory.

“SET” – The hold-off time can be set by entering value into edit box or using scrollbar.

TIP: You can use units in the edit box (for example 45u is 45 microseconds). Valid units are: n – nano, u – micro, m – milli).

4.10. Vertical range controls

The vertical range controls are located in the right of the main window.

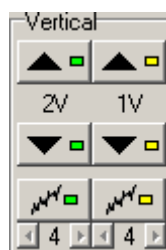


Fig. 4.10.1. – Range controls

Channel A controls are located in the left, channel B controls are located in the right.



- changes the range to less sensitive



Range with no respect to probe attenuation is displayed below this button.



- changes the range to more sensitive



- activates/deactivates digital shielding

Click  or  to decrease or increase digital shielding level.

4.11. Vertical shifts controls

The vertical shift controls are located in the right of the main window.

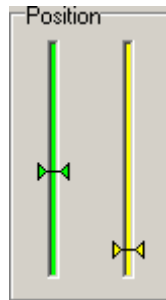


Fig. 4.11.1. – Vertical shift controls

Channel A controls are located in the left, channel B controls are located in the right.

Click between above or below the slider to shift waveform by smallest possible value.

The vertical shift can be set by dragging the slider as well.

TIP: Keeping the mouse button pressed above or below slider results in shift by 20 smallest possible values per second.

It is possible to change the vertical shift by dragging the waveform on the main screen.

TIP: Changing the vertical shift by dragging the waveform can be turned on/off in main menu.

4.12. Signal source controls

The signal source controls are located in the right of the main window.

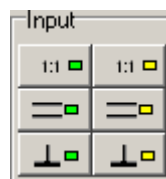





Fig. 4.12.1. – Signal source controls

Channel A controls are located in the left, channel B controls are located in the right.

“1:1”, “1:10”, “1:100” or “1:1000” – probe attenuation ratio

WARNING: Selection of improper probe attenuation ration may result in wrong information about voltages.

Click  or  to select coupling. Click  to ground input.

4.13. Channel information

The channel information are displayed in the top of the main window.

Channel A information are located in the left, channel B information are located in the right.

 


Fig. 4.13.1. – Channel information

Following information are displayed:

- - information about coupling and probe attenuation ratio
- ≡ - range
- ⊥ - voltage between horizontal cursor 1 and 0V (this information is not displayed when coupling is set to AC)
- ⊥ - voltage between horizontal cursor 1 and 2

WARNING: If the improper probe attenuation is set, the information will be inaccurate.

„U(t)“ – minimum and maximum (in case more than one sample is displayed on one point of the screen) voltage between 0V and the intersection of vertical cursor 1 and waveform

⊥ - trigger threshold voltage

“A” – ratio of the peak-peak voltage of the waveform on the screen and the voltage between horizontal cursors in decibels

4.14. Main menu

The main menu is located in the top of the main window. Following menu items are available:

File / Print – Opens print manager.

File / Exit – Closes application.

File / Export / Manage exports – Opens the window, where the export definitions can be configured. Click item in the *File / Export* to export data using specified definition.

Settings / Save settings – Saves current settings into selected file

Settings / Load settings – Loads settings from selected file

Settings / Process licence file – Loads and processes specified licence file

Settings / Compensation generator – Activates/deactivates compensation generator.

Settings / WCD sensitivity / Very high – Sets very high WCD sensitivity.

Settings / WCD sensitivity / High – Sets high WCD sensitivity

Settings / WCD sensitivity / Medium – Sets medium WCD sensitivity

Settings / WCD sensitivity / Low – Sets low WCD sensitivity

Settings / WCD sensitivity / Off – Turns the WCD off

Settings / Digital shielding level – Opens window, where you can select digital shielding level.

Settings / Options – Opens the window, where the software options can be changed

Help / Help – Displays the Help index

Help / About – Displays information about product.

4.14.1. Options

Click the item in the main menu to open options window.

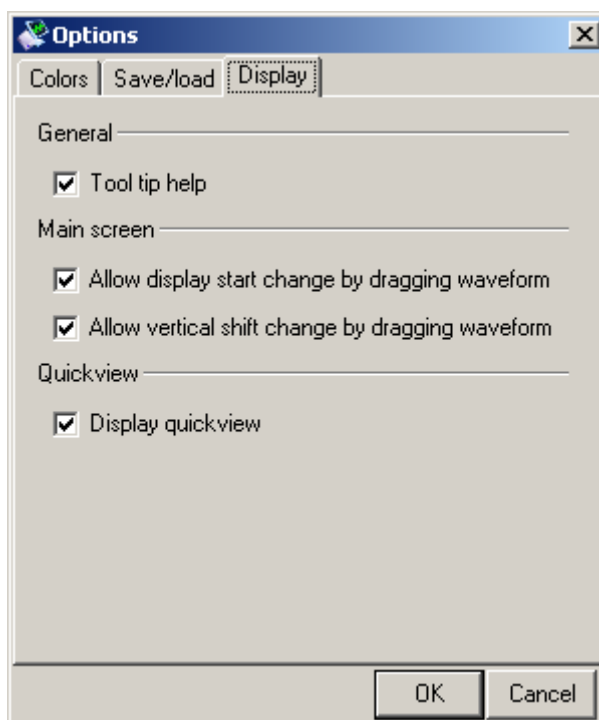


Fig. 4.14.1.1. – Options window

Following options are available:

Colors / Screen colors / Channel colors – click color of the channel to change it

Colors / Screen colors / Cursors colors – click color of the cursor to change it

Colors / Screen colors / Screen color – click color to change the screen background

Colors / Screen colors / Grid color – click color to change the grid color

Save/load / Save behaviour / Automatically increment filename – if the filename of the target file ends with number, that number will be automatically incremented on successful save

Save/load / Load behaviour / Automatically increment filename – if the filename of the source file ends with number, that number will be automatically incremented on successful load

Save/load / Load behaviour / Automatically apply settings – settings from data file will be automatically applied on successful load

Save/load / X and Y offset / Allow X offset change by dragging waveform – the X offset of the loaded waveform can be changed by dragging the waveform on the oscilloscope screen

Save/load / X and Y offset / Allow Y offset change by dragging waveform – the Y offset of the loaded waveform can be changed by dragging the waveform on the oscilloscope screen

Display / General / Tool tip help – activates tool tip help

Display / Main screen / Allow display start change by dragging waveform – the displayed part of the waveform on the oscilloscope screen can be changed by dragging waveform on the oscilloscope screen

Display / Main screen / Allow vertical shift change by dragging waveform – the vertical shift can be changed by dragging waveform on the oscilloscope screen

Display / Quickview / Display quickview – if more than 64k samples are acquired, quickview is displayed above oscilloscope screen

4.14.2. Manage exports window

Click the item in the main menu to open „Manage exports“ window.

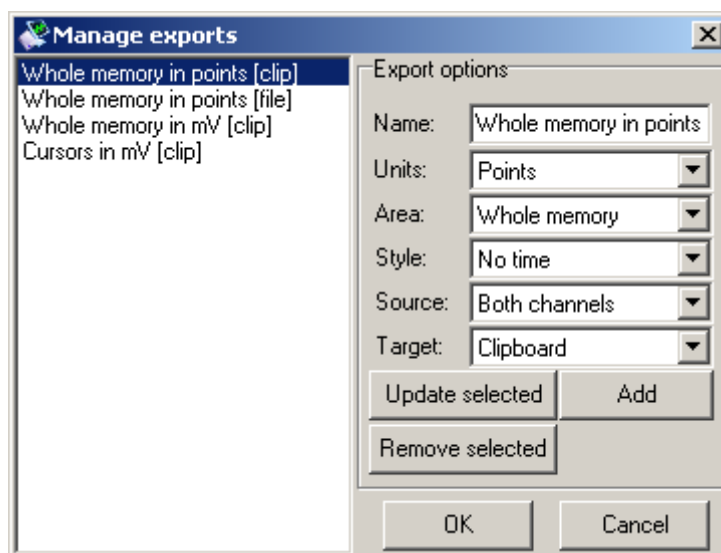


Fig. 4.14.2.1. – Manage exports window

The list of all saved definition is in the left of the window. Click definition in the list to select it and fill the options in the right with it.

TIP: The export items in the main menu are created in the order the definitions are in the list. Drag definition in the list to change its position.

Each definition has following options:

Name – identifies definition in the main menu. Click menu item to export data using the definition.

Units – indicates, which units will be the data converted to. Following options are available:

mV – samples will be exported in mV

V – samples will be exported in V

Points – samples will be exported as number from 0 to 255

Area – indicates area, that will be exported. Following options are available:

Whole memory – whole memory will be exported

Screen – data on the oscilloscope screen will be exported

Vertical cursors – data between vertical cursors will be exported

Style – indicates style, which will be used to export data. Only one style is available at the moment: exports each sample on the separate line and the tabulator is used as the delimiter between channel A and B

Source – indicates source of the data for the export. Following options are available:

Channel A – channel A will be exported

Channel B – channel B will be exported

Both channels – both channels will be exported

Target – indicates target of the export. Following options are available:

Clipboard – data will be exported to the clipboard

File – data will be exported to the file. The standard dialog window opens before the export, which will allow you to select target file.

Click „Update selected“ button to update selected definition.

Click „Remove selected“ button to remove selected definition.

Click „Add“ button to add the definition to the list.

Click „OK“ to update items in the main menu, which allows you to export data according to new definitions.

4.15. Special functions controls

The special functions controls are located in the lower left corner of the main window.



Fig. 4.15.1. – Special functions controls

Two function types exist:

1. Transformation functions, which display result on the main screen using virtual channel. These have blue color.

2. Other functions, which doesn't display result on the main screen. These have green color.

Click one of the transformation function button to half-activate it. After click on the desired virtual channel, the function is fully activated and the results are displayed with the color of the selected virtual channel.

Click one of the other function button to activate it.

You can find special functions description in chapter 6.

5. Other functions

5.1. Print Support

To open the print manager window, click the “Print” item of the [main menu](#).

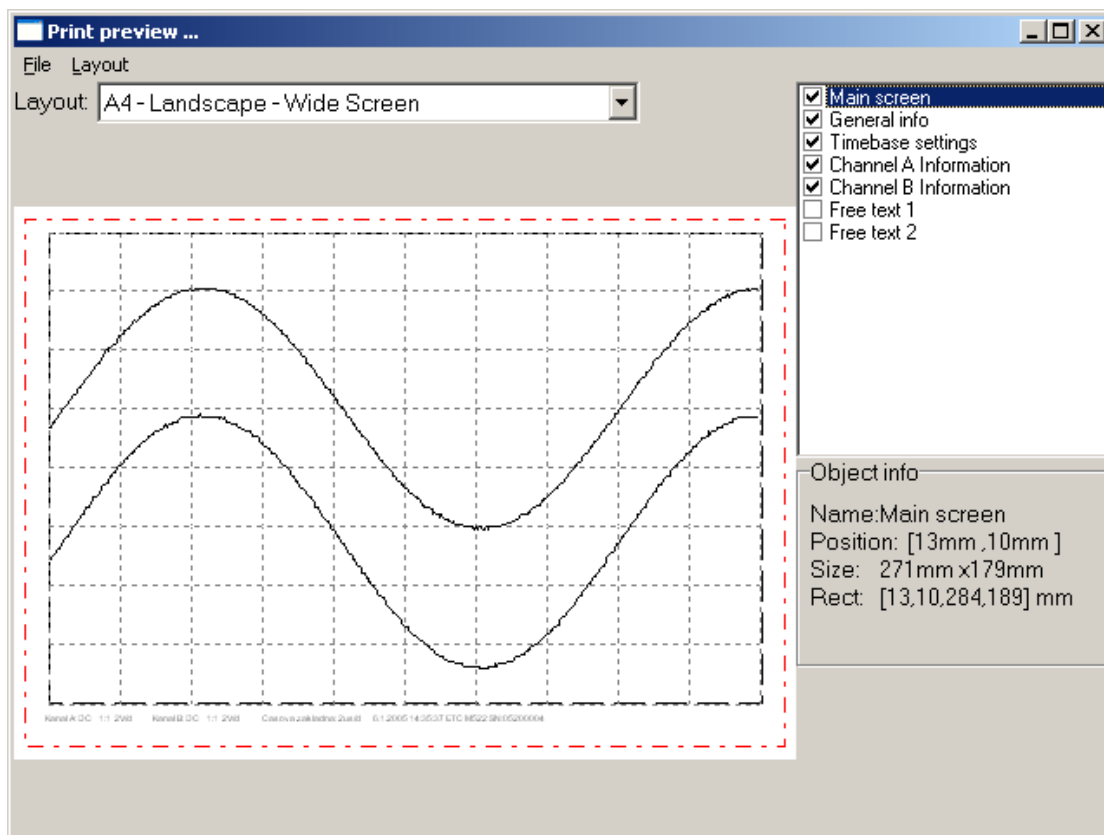


Fig. 5.1.1. - Print Manager Window

On the left side of the window the page is previewed as it will be printed. Several important parts of the page are highlighted. The lines marking these parts will not be printed. The red line outlines the printable area of the page. Selected object is marked by black dashed outline.

To select an object, click it. You can move it into a desired position by dragging it. To change the size of a chosen object, drag its outline.

In the lower right corner of the window the following information on the properties of the selected object is shown:

- “Name” – Name of the object
- “Position” – Coordinates of the upper-left corner of the object on the page in millimeters
- “Size” – Size of the object in millimeters
- “Rect” – Position of the upper-left corner and the lower-right corner on the page in millimeters

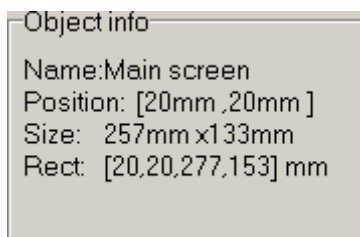


Fig. 5.1.2. - Object Info

In the upper-right corner of the window names of all the objects that can be placed into the page are listed. To display/hide an object, click the box next to the object name. To select an object, click the name of the object (if the object is displayed).

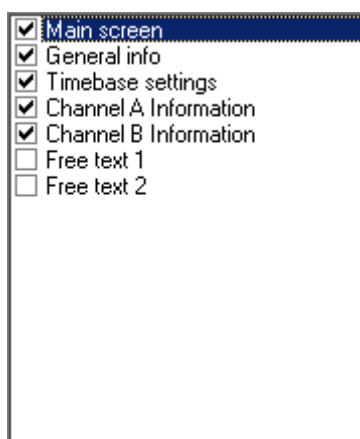


Fig. 5.1.3. - List of available objects

TIP: Two objects with content that can be specified by the user are available (objects “Free text 1” and “Free text 2”). Double-clicking any of these objects opens a dialog window to insert the text to be displayed.

It is possible to select automatic layout and predefined schemes of object display in the “Layout” combo-box. Choosing the “Custom” item does not affect the current layout.

WARNING: In the “Layout” combo-box only the layouts available for the current paper size are shown.

It is possible to save a modified layout under the current name choosing the “Layout / Save layout” item of the main menu of this window. To save it under a different name, choose “Layout / Save layout as”. A dialog box will appear to insert the name for the new layout.

Following are the other items Layout menu consists of:

- „Layout / Manage layouts” – Opens the Layout manager window.
- „File / Printer setup” – Opens the printer settings window

„File / Print“ – Prints the page

„File / Close“ – Terminates the print manager

5.1.1. Setting the name of a new layout

To open the Specify layout name dialog window, select the “*Layout / Save layout as*” item. Now you can enter the name of the new scheme.

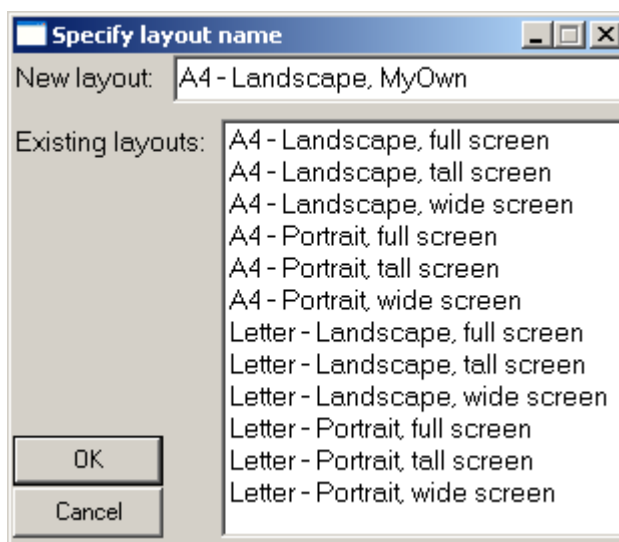


Fig. 5.1.1.1. - Specify Layout Name Window

It is necessary to insert a name of the new layout into the “New layout” box. This name has to differ from the names of the existing layouts. If the name would be identical with the name of another layout, this layout would be replaced by the new layout. At the same time the existing layout would be highlighted in the layout list. If you click a name of a layout in the list, this name will appear in the “New layout” box.

To save the layout, click the OK button.

5.1.2. Layout Manager

To open the Layout Manager window, select the “*Layout / Manage layouts*” item in the main menu of the print manager window.

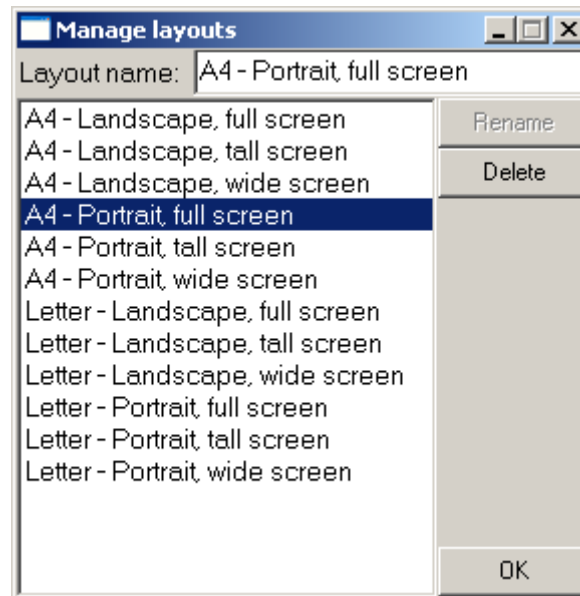


Fig. 5.1.2.1. - Layout Manager Window

To select a layout, double-click its name in the list.

To erase the selected layout, click the “Delete” button.

To rename a layout, select it, insert the new name into the “Layout name” box and then click the “Rename” button.

6. Special functions

6.1. 80% function (80%)

The horizontal cursors' positions are affected as follows:

Lower horizontal cursor is moved upwards by 10% of the distance between cursors and the upper one is moved downwards by same 10%.

6.2. Channel difference function (A-B)

The function result depends on the reference cursor state:

1. Reference cursor active: function calculates difference between the channel A and channel B, where the reference cursor level is considered to be zero. The result of the zero value is displayed on the reference cursor position.

2. Reference cursor inactive: function calculates difference of the channel A and channel B, where the 0V level is considered to be zero. The result of the zero value is displayed in the middle of the screen (between fourth and fifth division).

6.3. Channel add function (A+B)

The function result depends on the reference cursor state:

1. Reference cursor active: function adds channel A and channel B, where the reference cursor level is considered to be zero. The result of the zero value is displayed on the reference cursor position.

2. Reference cursor inactive: function adds channel A and channel B, where the 0V level is considered to be zero. The result of the zero value is displayed in the middle of the screen (between fourth and fifth division).

6.4. Channel A inversion (-A)

Function calculates inversion of the channel A (with no respect to 0V).

6.5. Channel B inversion (-B)

Function calculates inversion of the channel B (with no respect to 0V).

6.6. Channel A voltage inversion (-VA)

Function calculates channel A inversion, where the reference cursor position is considered as a zero value (reference cursor on) or the 0V is considered as a zero value (reference cursor off).

6.7. Channel B voltage inversion (-VB)

Function calculates channel B inversion, where the reference cursor position is considered as a zero value (reference cursor on) or the 0V is considered as a zero value (reference cursor off).

6.8. X-Y function (X/Y)

The X-Y function window is opened after an activation of the X-Y function.

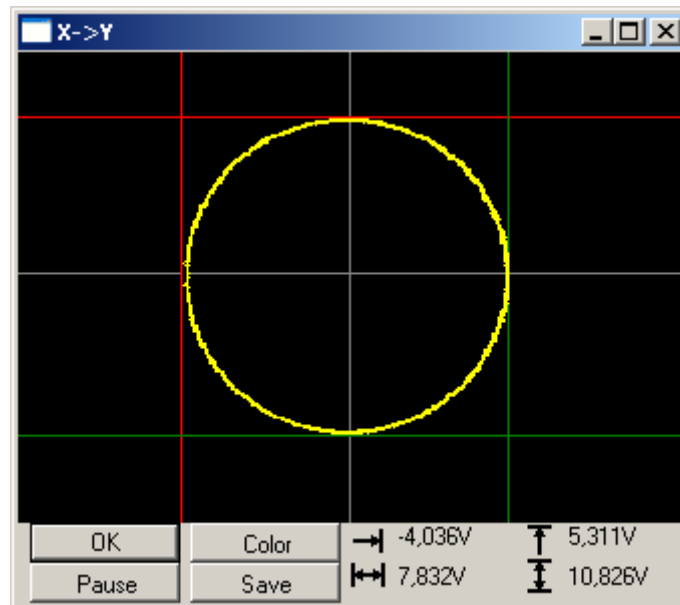


Fig. 6.8.1. – X-Y function window

TIP: The X-Y function window stays always on top. Therefore it is possible to change oscilloscope settings and see their influence immediately.

The 0V values for X-axis and Y-axis are displayed in gray color.

TIP: The 0V positions can be changed by vertical shift for both axis.

Two horizontal and two vertical cursors are available. Drag them to change their position.

TIP: The X-Y function displays the data visible on the main screen. Zoom function affects amount of displayed data.

The cursors' position information are displayed in lower right corner of the window:

- - voltage between red vertical cursor and 0V
- ↔ - voltage between vertical cursors
- ↑ - voltage between red horizontal cursor and 0V
- ↕ - voltage between horizontal cursors

“Color” – opens standard operating system dialog, where you can select the shape color

“Save” – saves shape in .jpg format.

“Pause” – pauses shape updating

6.9. Fourier transformation function (FT)

The fourier transformation transforms acquired samples using fourier transformation. The FFT (fast fourier transformation) and DFT (discrete fourier transformation) are implemented. In case the automatic period selection is activated, one period of waveform is transformed, otherwise the part distinguished by cursors in oscilloscope software is transformed.

The fourier transformation window is opened after activation of the FT function.

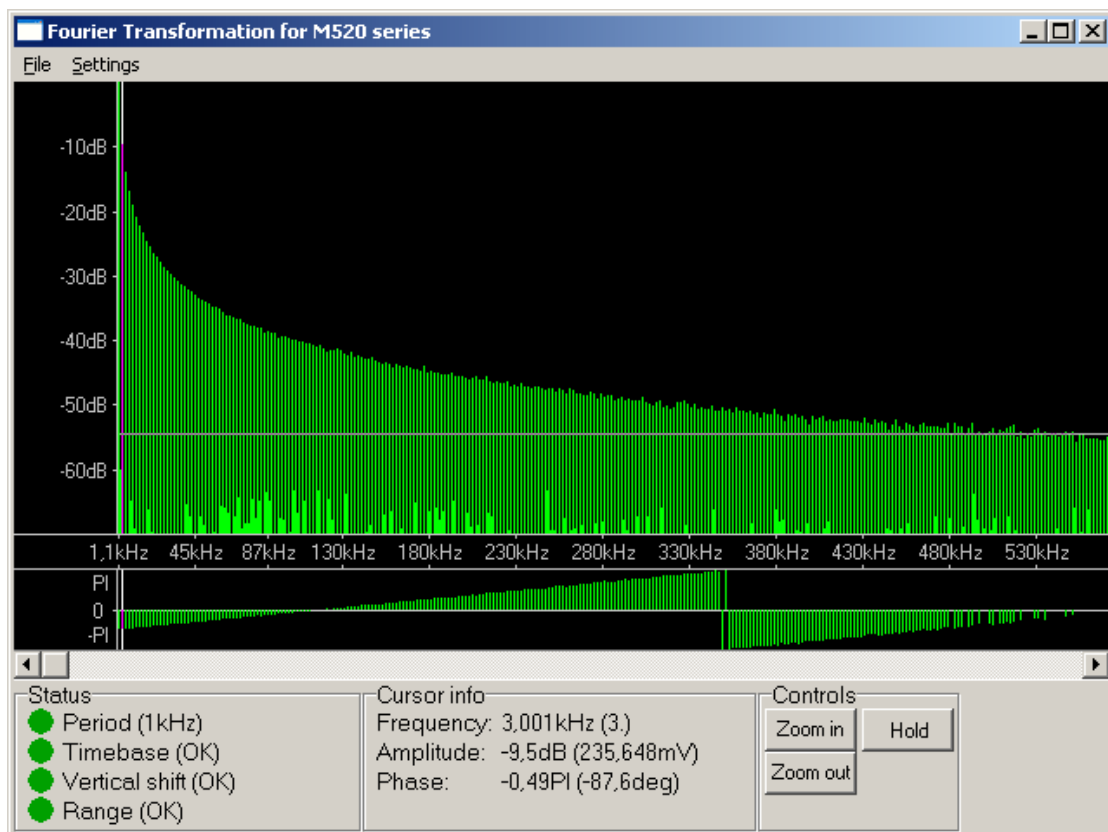


Figure 6.9.1. – Fourier transformation window

The main screen is located in the top of the window. The frequency bar divides it into two parts. You can change the parts' size by dragging this bar. The harmonics' amplitude is displayed in the top part (amplitude part), the phase in bottom one.

The threshold amplitude is represented by grey horizontal line in the amplitude part. You can change threshold by dragging this line. Phase is displayed only for the harmonics with amplitude above this threshold.

If the decibels amplitude mode is activated, you can change amplitude range by dragging ticks in the left of the amplitude part.

The watched harmonic can be selected by vertical grey cursor.

You can scroll data using the scroll bar located below main screen.

The status panel with information about analyzed signal is located in the left bottom corner of the main window.

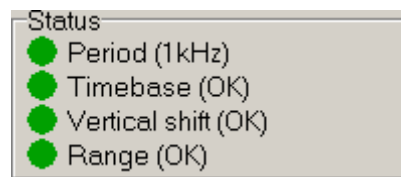


Figure 6.9.2. – Status panel

If the indicator „Period“ is:

red – application was not able to find period automatically

green – period found successfully

grey – the manual selection of period is activated

The current selected period is displayed in parentheses.

If the indicator „Timebase“ is:

red, yellow – the timebase is too slow for analyzed signal, faster timebase will produce better results

green – suitable timebase is set

grey – the automatic period selection is deactivated

If the indicator „Vertical shift“ is:

red – vertical shift is not suitable. If the „Up“ is in parentheses, the waveform is shifted up, „Down“ – waveform is shifted down.

green – suitable vertical shift is set.

If the indicator „Range“ is:

red – range is not suitable. If the „Sensitive“ is in parentheses, sensitive range is set, „Insensitive“ – insensitive range is set.

green – suitable range is set.

The information about harmonic selected by cursor are displayed in the bottom of the main window.

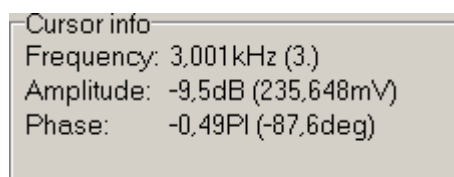


Figure 6.9.3. – Information about harmonic selected by cursor

„Frequency“ – Frequency of harmonic (its index)

„Amplitude“ – Amplitude of harmonic in decibels (in voltage)

„Phase“ – Phase of harmonic in radians (in degrees)

TIP: The effective or peak voltage of harmonic can be displayed. You can select it in main menu.

The main screen controls are located in the right bottom corner of the main window.

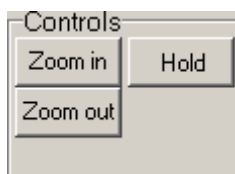


Figure 6.9.4. – Screen controls

Click „Hold“ button to pause/unpause data refresh. Click „Zoom in“ to display less data on the screen, click „Zoom out“ to display more.

TIP: You can zoom in/out using mouse wheel: if the mouse cursor is over amplitude part of screen, rotation of wheel from you zooms in, to you zooms out. The position of harmonic below mouse cursor remains intact after zoom (if possible).

6.9.1. Main menu

The main menu is located in the top of the window. Following items are available:

File / Print – Opens the print manager

Settings / Data source / Channel A – Sets channel A as data source

Settings / Data source / Channel B – Sets channel B as data source

Settings / Period selection / Automatic – Activates automatic period selection

WARNING: Automatic period selection can fail to find period of some signals. If you are not sure, whether found period is correct, select period by cursors and activate one of manual modes.

Settings / Period selection / Manual with fine shift – The period selected by cursors are automatically adjusted to match period. The period is adjusted maximally by +2 points of scope screen.

TIP: Manual mode with fine shift is suitable if you need to select signal period longer than 500 samples. It is not possible to select period with precision of one sample in manual mode if there is more than 500 samples on the oscilloscope screen.

Settings / Period selection / Manual – The period is selected by vertical cursors

WARNING: It is not possible to select period with precision of one sample in manual mode if there is more than 500 samples on the oscilloscope screen, because one screen point corresponds with more than one acquired sample. The manual mode with fine shift is suitable for most measurements.

TIP: The more samples will be period composed of, the more precise results will be achieved.

Settings / Algorithm / FFT – Data will be transformed by fast fourier transformation.

Settings / Algorithm / DFT – Data will be transformed by discrete fourier transformation.

TIP: The FFT is suitable for most measurements. DFT is suitable for extremely high precise measurements only: FFT with very high quality is essentially same as DFT.

Settings / FFT quality / Normal – Sets normal FFT quality. This quality distorts harmonics near half of sampling frequency.

Settings / FFT quality / High - Sets high FFT quality. This quality little distorts harmonics near half of sampling frequency.

Settings / FFT quality / Very high – Sets very high FFT quality. The result is essentially same as it were transformed using DFT.

WARNING: FFT with normal quality lowers amplitude of harmonics near half of sampling frequency. We do recommend to use DFT for precise measurements of these frequencies (or FFT with very high quality, if fast transformation is desired).

Settings / Amplitude mode / Decibels – Displays harmonics' amplitudes in logarithmic mode, where 0dB is amplitude of harmonic with the highest energy.

Settings / Amplitude mode / Voltage – Displays harmonics' amplitudes in linear mode in voltage.

Settings / Voltage mode / Amplitude – Voltage will represent amplitude of harmonic.

Settings / Voltage mode / Effective – Voltage will represent effective voltage of harmonic.

Settings / Stay on top – Activates/deactivates always on top mode of main window.

Following items control inverse fourier transformation (IFT). It is necessary to activate IFT to use them.

Filter / Mode / Surpress noise – The harmonics with level higher than the threshold will be used for inverse fourier transformation.

Filter / Mode / Simple – Inverse fourier transformation is calculated from selected harmonics. Hold ctrl and click on harmonics to select/deselect it. Hold shift and double click on screen to select/deselect all harmonics.

Filter / Mode / Complex – The harmonics are modified by filter specified before IFT calculation. Therefore, the result represents the input waveform pass through specified filter. You can specify filter by clicking on the item in main menu.

Filter / Algorithm / FFT – Data will be transformed by inverse fast fourier transformation.

Filter / Algorithm / DFT – Data will be transformed by inverse discrete fourier transformation.

WARNING: The inverse FFT algorithm has negative effect on the waveform quality. To achieve best results, use DFT on both transformations (inverse fourier transformation and fourier transformation).

Filter | FFT Quality | Normal – Sets normal quality of the inverse FFT.

Filter | FFT Quality | High – Sets high quality of the inverse FFT.

Filter | FFT Quality | Very high – Sets very high quality of the inverse FFT.

WARNING: Inverse FFT quality settings affect only inverse fourier transformation. Change parameters of the fourier transformation to eliminate errors caused by the fourier transformation.

Filter | Configure complex filter – Opens the configure complex filter window.

6.9.2. Complex filter window

The complex filter window is opened after click on the main menu item.

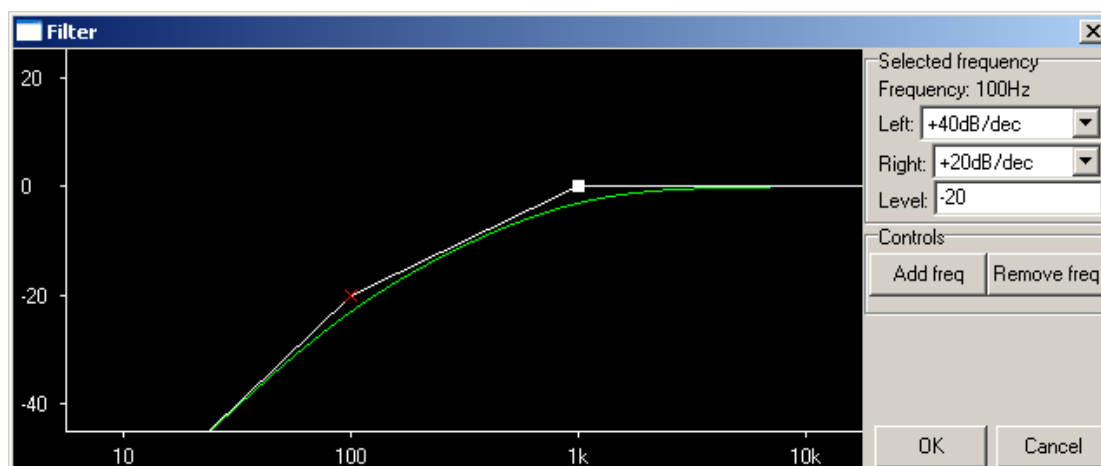


Figure 6.9.2.1. – Complex filter window

The filter graph is displayed in the left part of the window. Cut frequencies are marked by a cross or square. Software composes real filter from RC filters with specified cut frequencies. Real filter is displayed in green.

Cut frequency marked by cross has its level fixed. Other frequencies' levels (marked by square) are calculated from fixed frequency level.

Click cross or square to selected cut frequency. Selected cut frequency is displayed in red.

The selected frequency controls are located in right of the window.

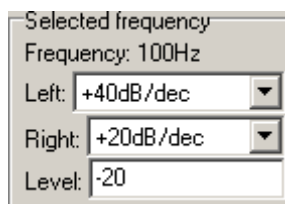


Figure 6.9.2.2. – Selected frequency controls

Click „left“ combobox to change filter steepness below selected frequency, click „right“ combobox to change filter steepness above selected frequency.

It is possible to set attenuation at specified frequency in „level“ edit box. The frequency's level become fixed after this operation.

Frequencies controls are located in the bottom left corner of the window.

 


Figure 6.9.2.3. – Frequencies controls

Click „Remove freq“ button to delete selected frequency.

Click „Add freq“ button to open a window, where you can select new cut frequency.

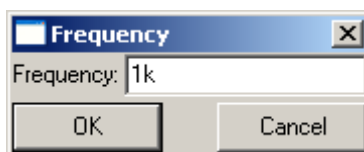


Figure 6.9.2.4. – New frequency window

It is necessary to enter desired frequency into „Frequency“ edit box.

TIP: It is possible to enter value into „Frequency“ edit box with power of ten (for example 1k = 1000). It is possible to use k – kilo and M – mega.

6.10. Inverse fourier transformation function (IFT)

This function calculates inverse fourier transformation from the data calculated by fourier transformation module (FT).

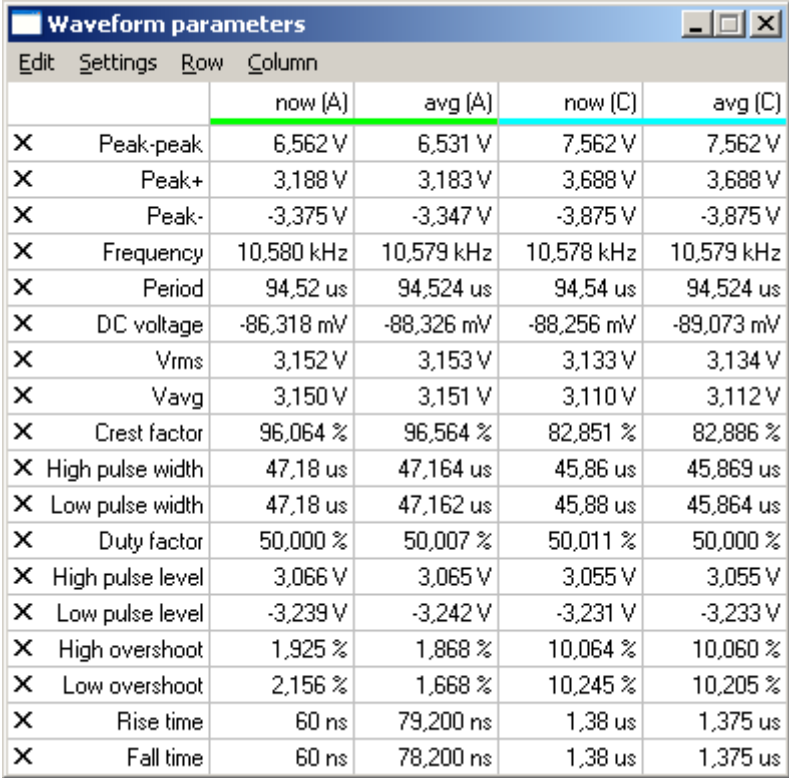
WARNING: You can use this function only together with FT function. If the FT function is not activated, it is not possible to activate IFT function.

All IFT settings are accessible through FT module's main menu.

6.11. Waveform parameters function (Wp)

Waveform parameters function calculates parameters of the channel A, B, C or D waveform.

The window opens after module activation.



		now (A)	avg (A)	now (C)	avg (C)
X	Peak-peak	6,562 V	6,531 V	7,562 V	7,562 V
X	Peak+	3,188 V	3,183 V	3,688 V	3,688 V
X	Peak-	-3,375 V	-3,347 V	-3,875 V	-3,875 V
X	Frequency	10,580 kHz	10,579 kHz	10,578 kHz	10,579 kHz
X	Period	94,52 us	94,524 us	94,54 us	94,524 us
X	DC voltage	-86,318 mV	-88,326 mV	-88,256 mV	-89,073 mV
X	Vrms	3,152 V	3,153 V	3,133 V	3,134 V
X	Vavg	3,150 V	3,151 V	3,110 V	3,112 V
X	Crest factor	96,064 %	96,564 %	82,851 %	82,886 %
X	High pulse width	47,18 us	47,164 us	45,86 us	45,869 us
X	Low pulse width	47,18 us	47,162 us	45,88 us	45,864 us
X	Duty factor	50,000 %	50,007 %	50,011 %	50,000 %
X	High pulse level	3,066 V	3,065 V	3,055 V	3,055 V
X	Low pulse level	-3,239 V	-3,242 V	-3,231 V	-3,233 V
X	High overshoot	1,925 %	1,868 %	10,064 %	10,060 %
X	Low overshoot	2,156 %	1,668 %	10,245 %	10,205 %
X	Rise time	60 ns	79,200 ns	1,38 us	1,375 us
X	Fall time	60 ns	78,200 ns	1,38 us	1,375 us

Figure 6.11.1. – Waveform parameters window

Following parameters are displayed in the table:

- „Peak-peak“ – peak-peak voltage
- „Peak+“ – voltage of the maximum
- „Peak-“ – voltage of the minimum
- „Frequency“ – frequency
- „Period“ – period
- „DC voltage“ – DC voltage
- „Vrms“ – effective voltage
- „Vavg“ – average voltage
- „Crest factor“ – crest factor

If the module fails to detect periodicity of the waveform, „N/A“ is displayed in the place of „Frequency“, „Period“, „DC voltage“, „Vrms“, „Vavg“, „Crest factor“.

- „High pulse width“ – high pulse width
- „Low pulse width“ – low pulse width
- „Duty factor“ – duty factor
- „High pulse level“ – level of the high pulse
- „Low pulse level“ – level of the low pulse
- „High overshoot“ – overshoot of the leading edge
- „Low overshoot“ – overshoot of the trailing edge
- „Rise time“ – length of the leading edge
- „Fall time“ – length of the trailing edge

If the module fails to detect periodicity or rectangular shape of the waveform, „N/A“ is displayed in the place of „High pulse width“, „Low pulse width“, „Duty

factor“, „High pulse level“, „Low pulse level“, „High overshoot“, „Low overshoot“, „Rise time“, „Fall time“.

Time between 10% and 90% of the voltage between low and high pulse is considered to be length of the edge.

Click cross at the left side of the parameter name to hide it.

It is possible to display following statistics for each parameter:

- „now“ – current value of the parameter
- „min“ – minimal value of the parameter
- „max“ – maximal value of the parameter
- „avg“ – average value of the parameter
- „dev“ – parameter deviation

WARNING: The statistics are calculated from whole history of the waveform. Click item in main menu to reset them.

6.11.1. – Main menu

Main menu is located in top of the window. Following items are available:

Edit / Copy – Copies table to clipboard in text format.

Edit / Reset params – Resets statistics of all parameters.

Settings / Channel C range source – Channel C parameters will be calculated using range of selected channel.

Settings / Channel D range source – Channel D parameters will be calculated using range of selected channel

Settings / Stay on top – Activates/deactivates mode always on top mode of the window.

Row / Show – Shows/hides selected parameter

Row / Show only – Shows selected parameters and hides others.

Row / Show all – Shows all parameters

Row / Configure rows – Opens the window, where it is possible to show/hide parameters.

Column / Channel – Activates/deactivates selected channel parameters

Column / Show – Shows/hides selected statistic

Column / Show only – Shows selected statistic and hides others.

Column / Show all – Shows all statistics.

Column / Configure columns – Opens the window, where it is possible to activate/deactivate channels and show/hide statistics.

7. Performance characteristics

7.1. Vertical deflection system

No of divisions	8
No of pixels per division	32
Deflection factor range	10mV/div to 5V/div in 1-2-5 sequence
Accuracy	+/- 2% of current value + 1 pixel
Resolution	8 bits (0,39%)
Frequency response (-3dB)	DC: 0 - 150 MHz, AC: 1.2Hz – 150 MHz
Step response rise time	max. 2.4 ns
Channel isolation	min. -60 dB
Resistance	1 MOhm +5 %, -2 %
Input resistance inaccuracy adjustment	Digital for absolute accuracy +/- 2% of current voltage + 1 pixel
Capacitance	29 pF +/- 1pF
Zero setting accuracy	+/- 2% of the screen
Maximum input voltage	+/- 200V at 100 kHz or less

Table 7.1.1. – Vertical deflection system

7.2. Triggering

System type	Dual level
Trigger source for primary level	selectable Channel A, Channel B or external trigger input
Trigger source for secondary level	selectable Channel A, Channel B or external trigger input
Threshold setting	Channel A and Channel B on the whole display range. External fixed on about 1.5V
Slope selection	Leading or trailing edge independently on each source
Minimum trigger pulse period	5 ns
Minimum trigger pulse length	2.5 ns
Maximum voltage on external trigger input	-10V to +13V at 20 kHz or less
Adjustments	Digital filter with ability of setting the valid pulse length up to 131072*Ts for each level and counter of valid triggering events settable from 1 to 32768 for each level. HOLD-OFF settable up to 1048576*Ts with selectable AUTO mode, to sample proper amount of data before trigger. (Ts – actual real time sampling period)

Table 7.2.1. – Triggering

7.3. Data acquisition system

No of divisions	10
No of pixels per division	50

Mode of operation	Sampling before and after trigger with continual selection of the trigger position
Record length	settable from 1024 to 1048576 (1M) samples for each channel
Time base range in 1:1 mode	5 ns/d to 100 ms/d in 1-2-5 sequence
Time base range using different ZOOM modes	625 ps/d to 204.8 s/d
Time base accuracy	0.01 % to 100ns/d, 0.5 % for 50ns/d to 5 ns/d
Real time sampling frequency	500 Hz to 100 MHz
Equivalent sampling frequency	500 Hz to 10 GHz
Display range with respect to trigger event	1048576 samples before and 1048576 samples after trig. event in length of 1048576 samples

Table 7.3.1. – Data acquisition system

7.4. Probe compensation generator

Output connector	BNC, together with External trigger input
Output impedance	1 kOhm to parallel with 10nF and approx. 50 Ohm serial
Output waveform	Pulse with 1:1 duty cycle
Frequency	1465 Hz
Output voltage (no load)	3.3V +/- 5%

Table 7.4.1. – Compensation generator

7.5. Power

Power source	USB interface via USB cable
Max current	USB1.1 – 350mA; USB2.0 – 450mA

Table 7.5.1. - Power

7.6. Mechanical characteristics

Dimensions without feet and connectors	165 x 111 x 35 mm
Dimensions with feet and connectors	182 x 111 x 39 mm
Weight	520 g

Table 7.6.1. – Mechanical characteristics

7.7. M574 timebase ranges

No	REAL TIME	t/div 1:16	t/div 1:1	t/div 10:1	Max. ACQ. TIME	SAMP. PERIOD	SAMP. FREQ.
1	no	10.24us	5ns	500ps	102.4us	100ps	10GHz
2	no	20.48us	10ns	1ns	204.8us	200ps	5GHz
3	no	40.96us	20ns	2ns	409.6us	400ps	2.5GHz

4	no	102.4us	50ns	5ns	1.024ms	1n	1GHz
5	no	204.8us	100ns	10ns	2.048ms	2n	500MHz
6	no	409.6us	200ns	20ns	4.096ms	4ns	250MHz
7	yes	1.024ms	500ns	50ns	10.24ms	10ns	100MHz
8	yes	2.048ms	1us	100ns	20.48ms	20ns	50MHz
9	yes	4.096ms	2us	200ns	40.96ms	40ns	25MHz
10	yes	10.24ms	5us	500ns	102.4ms	100ns	10MHz
11	yes	20.48ms	10us	1us	204.8ms	200ns	5MHz
12	yes	40.96ms	20us	2us	409.6MS	400ns	2.5MHz
13	yes	102.4ms	50us	5us	1.024s	1us	1MHz
14	yes	204.8ms	100us	10us	2.048s	2us	500kHz
15	yes	409.6ms	200us	20us	4.096s	4us	250kHz
16	yes	1.024s	500us	50us	10.24s	10us	100kHz
17	yes	2.048s	1ms	100us	20.48s	20us	50kHz
18	yes	4.096s	2ms	200us	40.96s	40us	25kHz
19	yes	10.24s	5ms	500us	102.4s	100us	10kHz
20	yes	20.48.s	10ms	1ms	204.8s	200us	5kHz
21	yes	40.96s	20ms	2ms	409.6s	400us	2.5kHz
22	yes	102.4s	50ms	5ms	1024s	1ms	1kHz
23	yes	204.8s	100ms	10ms	2048s	2ms	500Hz

Table 7.7.1. – M574 timebase ranges

8. Saved data format

8.1. .esb format

The data in the .esb format are saved in binary form without compression. The file consists of the information block. The format of the block depends on its type. Following eight types are defined:

integer (integer)
 floating-point (double)
 integer array (intarray)
 boolean array (boolarray)
 floating-point array (doublearray)
 fixed-length integer array (fintarray)
 boolean (boolean)
 acquired data (acqdata)

8.1.1. Block structure

Each block starts with 8 bytes, which determine block length in bytes (32 bit value written in the first 4 bytes) and information about block contents (32 bit value written in the last 4 bytes). In case the block contains the information, which the application doesn't need, application can skip this block (by using the known block length).

Block structure is following:

Integer

4 bytes	4 bytes	4 bytes
block length (12)	information code	value

Double

4 bytes	4 bytes	8 bytes
block length (16)	information code	floating-point value (double)

IntArray

4 bytes	4 bytes	4 bytes	4 bytes	4*n bytes
block length	information code	array length (n)	array length 2 (n)	array contents

Array length and array length 2 must be the same. In case they are not, the file is corrupted.

BoolArray

4 bytes	4 bytes	4 bytes	4 bytes	n bytes
block length	information code	array length (n)	array length 2 (n)	array contents

Array length and array length 2 must be the same. In case they are not, the file is corrupted.

DoubleArray

4 bytes	4 bytes	4 bytes	4 bytes	8*n bytes
block length	information code	array length (n)	array length 2 (n)	array contents

Array length and array length 2 must be the same. In case they are not, the file is corrupted.

FIntArray

4 bytes	4 bytes	4 bytes	4 bytes
block length (16)	information code	first array item	second array item

Boolean

4 bytes	4 bytes	4 bytes
block length (12)	information code	boolean value (0 = false, 1 = true)

AcqData

4 bytes	4 bytes	4 bytes	4 bytes	-	...	-
block length	information code	channel count (n)	channel count 2 (n)	1-st channel data		n-th channel data

Channel count and channel count 2 must be the same. In case they are not, the file is corrupted.

The structure of the channel data is following:

4 bytes	4 bytes	n bytes
array length (n)	array length 2 (n)	array contents

Array length and array length 2 must be the same. In case they are not, the file is corrupted.

8.1.2. Available information

Following information are available in the file:

MemorySize (Integer) – code 0

Size of the memory used for data acquisition (in samples).

Timebase (Double) – code 1

Sampling rate used for data acquisition (in samples per second).

Range (DoubleArray) – code 2

Selected ranges (in mV per division). Array length corresponds with the channel count.

Shift (IntArray) – code 3

Vertical shift (0 is the maximal shift downwards, 4095 is the maximal shift upwards). Array length corresponds with the channel count. To determine the position of the 0V, use „GroundPos“ information.

Filter (BoolArray) – code 4

Indicates, whether the digital filter is on. Array length corresponds with the channel count.

FilterFactor (IntArray) – code 5

The digital filter level. Array length corresponds with the channel count.

TriggerSrcOnPrimary (BoolArray) – code 6

Indicates, whether the source is on/off (index 0 – channel A, 1 – channel B, 2 – external trigger input)

TriggerSrcLeadingPrimary (BoolArray) – code 7

Indicates, whether the triggering from the source is sensitive on the leading edge (index 0 – channel A, 1 – channel B, 2 – external trigger input).

TriggerLevel (IntArray) – code 8

The trigger threshold level (in quantization levels – from 0 to 255). Array length corresponds with the channel count.

TriggerCount (FIntArray) – code 9

The trigger count required to start acquisition on the trigger levels.

TriggerLength (FIntArray) – code 10

Minimal length of the valid trigger event (in samples).

TriggerMode (Integer) – code 11

The trigger mode (0 – Auto, 1 – Normal, 2 – Single, 3 – Manual).

AfterTriggerSamples (Integer) – code 12

Amount of samples acquired after trigger event.

HoldOffSamples (Integer) – code 13

Hold-off length in samples.

ProbeMode (IntArray) – code 14

The probe attenuation (0 – 1:1, 1 – 1:10, 2 – 1:100, 3 – 1:1000). Array length corresponds with the channel count.

Ground (BoolArray) – code 15

Indicates, whether the grounding is on. Array length corresponds with the channel count.

DC (BoolArray) – code 16

Indicates, whether the DC coupling is on. Array length corresponds with the channel count.

GroundPos (DoubleArray) – code 17

Position of the 0V on the screen (in quantization levels – from 0 to 255). Array length corresponds with the channel count.

AcquiredData (AcqData) – code 18

The data measured on the channels (together with virtual channels).

Version (Integer) – code 19

File version (currently set to zero).

FirstValidSamples (IntArray) – code 20

Index of the first valid sample in the channel data.

LastValidSamples (IntArray) – code 21

Index of the last valid sample in the channel data.

TriggerSrcOnSecondary (BoolArray) – code 22

Indicates triggering on the secondary level from source (index 0 – channel A, 1 – channel B, 2 – external trigger input).

TriggerSrcLeadingSecondary (BoolArray) – code 23

Indicates, whether the triggering from the source is sensitive on the leading edge (index 0 – channel A, 1 – channel B, 2 – external trigger input).

ATMode (Integer) – code 24

After trigger count mode (0 – HSC, 1 – FSC, 2 – Set, 3 – Min).

HFMode (Integer) – code 25

Hold-off mode (0 – Auto, 1 – Set).

SimpleTrigger (Bool) – code 26

Indicates „Simple“ mode of the trigger system.

WCDSensitivity (Integer) – code 27

Indicates WCD sensitivity. Value 255 indicates WCD switched off, 0 indicates the biggest sensitivity.